




MASEFES DIGITAL - H DOORPHONE - VIDEODOORPHONE CONNECTION SCHEME

NOTE
PLEASE CONNECT ALL GROUND WIRES TOGETHER AND AFTERWARDS TO THE CONNECTION 3 ON THE OUTSIDE PANEL OTHERWISE THERE COULD BE DISTORTION IN VOICE. IF YOU HAVE PROBLEMS IN VIDEO SIGNAL PLEASE CONNECT 75 - 220 OHM RESISTANCE TO THE CONNECTIONS 4 AND 5 ON THE LAST VIDEODOORPHONE

WARNING !
IF THE SYSTEM DO NOT HAVE GUARD PHONE, DOORMAN PHONE OR ARS1 (Intercommunication module), CONNECT WIRE 3 WITH WIRE 9

WARNING
If you have "COAXIAL CABLE" in the system, you can connect them to the connection 3 on the outside panel **DO NOT** connect coaxial cable to the connections 4 and 5

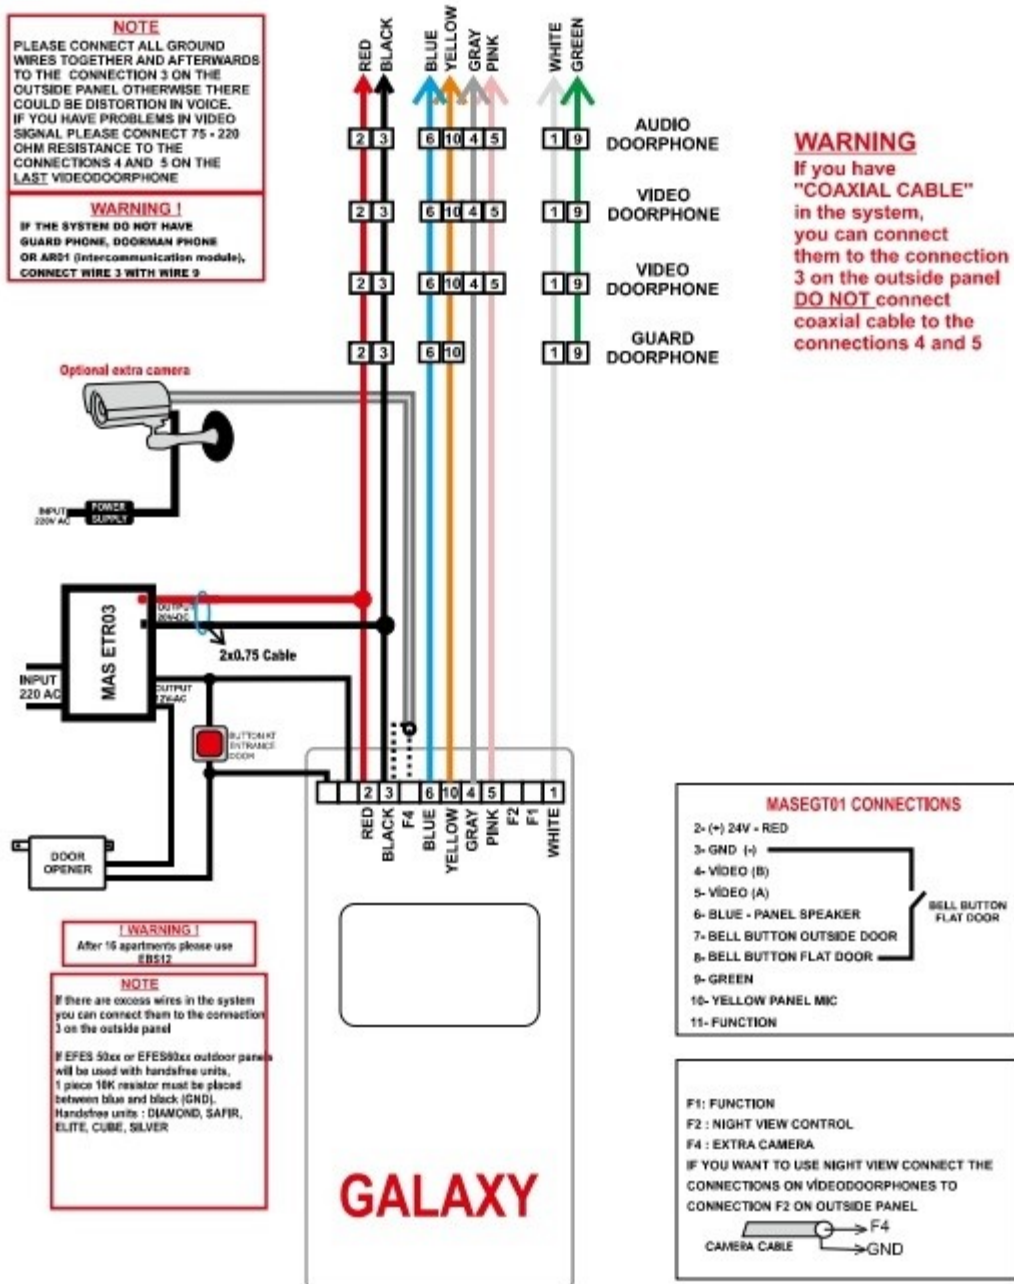

MASEGT01 CONNECTIONS

2- (+) 24V - RED
3- GND (-)
4- VIDEO (B)
5- VIDEO (A)
6- BLUE - PANEL SPEAKER
7- BELL BUTTON OUTSIDE DOOR
8- BELL BUTTON FLAT DOOR
9- GREEN
10- YELLOW PANEL MIC
11- FUNCTION

F1: FUNCTION
F2: NIGHT VIEW CONTROL
F4: EXTRA CAMERA
IF YOU WANT TO USE NIGHT VIEW CONNECT THE CONNECTIONS ON VIDEODOORPHONES TO CONNECTION F2 ON OUTSIDE PANEL

WARNING !
After 16 apartments please use EBS12

NOTE
If there are excess wires in the system you can connect them to the connection 3 on the outside panel

If EFES 50xx or EFES80xx outdoor panels will be used with handfree units, 1 piece 10K resistor must be placed between blue and black (GND).
Handfree units: DIAMOND, SAFIR, ELITE, CUBE, SILVER

GALAXY